



TLKR T40 Owner's Manual

English



68015000921-A(EN)

U01UT07ZZA

Printed in China

TLKR T40 Owner's Manual EN

Product Safety and RF Exposure for Portable Two-Way Radios

Caution Before using this product, read the operating instructions for safe usage contained in the Product Safety and RF Exposure booklet enclosed with your radio.


Attention!

Before using this product, read the RF energy awareness information and operating instructions in the Product Safety and RF Exposure booklet to ensure compliance with RF energy exposure limits.

Package Contents


- TLKR T40 Radio* (2 units)
- Belt Clip (2 units)
- TLKR T40 Owner's Manual

Radio Controls

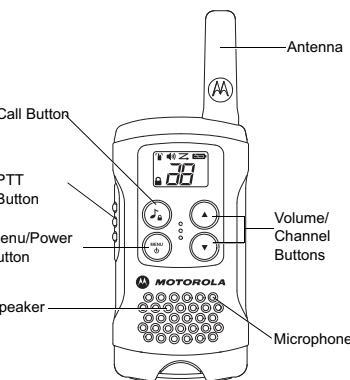

Display

Preparing Your Radio

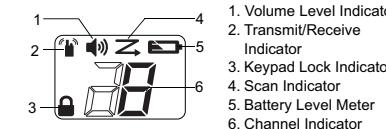

Installing the Battery

1. Make sure your radio is OFF.
2. To remove the battery compartment door, by pressing the tab at the bottom of the compartment door. Remove the door. Insert 3 AAA batteries into the battery compartment.
3. Replace the battery compartment door.

Battery Level and Low Battery Alert

- Indicates that the battery is fully charged.
 Blinks when battery is low; replace batteries immediately.

Channel Scan Mode

Enables your radio to scan for active channels. When activity is detected, your radio lands (stays) on that channel (for 2 seconds). To transmit on that channel, press the **PTT** button. When activity on the landed channel ends, your radio continues scanning other channels.

To turn the channel scan ON:

1. **MENU/** to enter Menu. Advance until blinks.
2. to turn ON channel scan.

MENU/ or **PTT** to turn OFF Scan mode.

Key Lock

Press and hold until appears to lock the keypad. Press and hold until disappears to unlock the keypad.

Warranty Information

The authorized Motorola dealer or retailer where you purchased your Motorola two-way radio and/or original accessories will honour a warranty claim and/or provide warranty service.

Please return your radio to your dealer or retailer to claim your warranty service. Do not return your radio to Motorola.

In order to be eligible to receive warranty service, you must present your receipt of purchase or a comparable substitute proof of purchase bearing the date of purchase. The two-way radio should also clearly display the serial number. The warranty will not apply if the type or serial numbers on the product have been altered, deleted, removed, or made illegible.

MOTOROLA, MOTO, MOTOROLA SOLUTIONS and the Stylized M logo are trademarks or registered trademarks of Motorola Trademark Holdings, LLC and are used under license. All other trademarks are the property of their respective owners.
© 2012 Motorola Solutions, Inc. All rights reserved.

Notes

Basic Radio Operations

Read this reference guide completely before attempting to operate the unit.

Turning Your Radio On/Off

Press and hold the **MENU/** button to turn your radio ON/OFF.

Adjusting the Volume

Adjust the volume by pressing the and buttons.

Adjusting the Sound (Key Beeps)

Your radio emits a beep each time one of the buttons is pressed (except the **PTT** button).

Press and hold the button while turning the radio ON to switch the sound OFF.

To turn this sound ON, turn the radio OFF and ON again without pressing the button.

Selecting a Channel

In order to speak to someone, both your radios must be set to the same channel.

To select a channel:

1. **MENU/** button to enter Menu.
2. or to the required channel.
3. Press **PTT** button to confirm the selection.

Monitor Mode

Enables you to listen for weak signals on the current channel. To turn the Monitor Mode ON:

1. **MENU/** button to enter menu. Advance through the menu until blinks.

2. Press the button for continuous listening. The icon continues to blink.

To turn the Monitor Mode OFF:

- Press the **MENU/** button to return to "Normal" mode. The icon stops blinking.

Roger Beep

Sounds to indicate the end of a **PTT** transmission. It can be heard through the speaker when Key Beep is on. It cannot be heard through the speaker if Key Beep is turned off.

Press and hold the button while turning the radio ON to turn the Roger Beep ON. Repeat the step to turn Roger Beep OFF.

Automatic Power Save

For better battery life, your radio is designed to switch to Power Save mode when there has been no transmissions after 3 seconds. The radio can receive transmissions in this mode.

What Is Not Covered By The Warranty

Defects or damage resulting from use of the Product in other than its normal and customary manner or by not following the instructions in this user manual.

Defects or damage from misuse, accident or neglect.

Defects or damage from improper testing, operation, maintenance, adjustment, or any alteration or modification of any kind.

Breakage or damage to aerials unless caused directly by defects in material or workmanship.

Products disassembled or repaired in such a manner as to adversely affect performance or prevent adequate inspection and testing to verify any warranty claim.

Defects or damage due to range.

Defects or damage due to moisture, liquid or spills.

All plastic surfaces and all other externally exposed parts that are scratched or damaged due to normal use.

Products rented on a temporary basis.

Periodic maintenance and repair or replacement of parts due to normal usage, wear and tear.

Notes

Talking on Your Radio

1. Hold your radio 5–8 cm from your mouth.
2. Press and hold the **PTT** button while speaking. The appears on the display.
3. Release the **PTT** button. You can now receive incoming calls. When you do, the appears on the display. To respond, repeat procedure from step 1.

Note: When you continue to transmit for 60 seconds, the radio emits TX Time Out tone and the icon flashes. The radio will stop transmitting.

Navigating through the Menu

1. To enter the Menu, press the **MENU/** button.
2. Additional presses of the **MENU/** button will advance you through the Menu.
3. To exit the Menu function, do one of the following:
 - a. Press and hold the **MENU/** button.
 - b. Press the **PTT** button.
 - c. Wait 10 seconds until the unit automatically returns to "Normal" mode.

Features on Your Radio

Call Tone

Your radio is equipped with a call tone.

To transmit a call tone, press the button.

Specifications

Channels 8 PMR
Frequency 446.00625 - 446.09375 MHz

Power Source 3 AAA Alkaline Batteries

Range Up to 4 km*

Battery Life 16 Hours (under typical use conditions)

*Range may vary depending on environmental and/or topographical conditions.

Frequency Chart

Channel	Freq. (MHz)	Channel	Freq. (MHz)
1	446.00625	5	446.05625
2	446.01875	6	446.06875
3	446.03125	7	446.08125
4	446.04375	8	446.09375

Copyright Information

The Motorola products described in this manual may include copyrighted Motorola computer programs stored in semiconductor memories or other media. Laws in the United States and other countries preserve for Motorola certain exclusive rights for copyrighted computer programs including, but not limited to, the exclusive right to copy or reproduce in any form the copyrighted computer program. Accordingly, any copyrighted Motorola computer programs contained in the Motorola products described in this manual may not be copied, reproduced, modified, reverse-engineered, or distributed in any manner without the express written permission of Motorola. Furthermore, the purchase of Motorola products shall not be deemed to grant either directly or by implication, estoppel, or otherwise, any license under the copyrights, patents or patent applications of Motorola, except for the normal non-exclusive license to use that arises by operation of law in the sale of a product.